



user guide

dta guide

rev



welcome to rovi dta guide



The DTA Guide is an engaging, new interactive program guide designed to work seamlessly with the DTA provided by REV. Explore up to 24 hours of programming, get in-depth program info, and easily configure parental controls, language and audio settings.

AN ENGAGING, INTERACTIVE PROGRAM GUIDE.

- See What's On Now and What's On Next for the channel being watched or when you change channels.
- Up to 24 hours of continuous program information.
- Color-coding of programming for Sports, Movies, etc.
- Parental controls.
- Ability to tune from the guide for live programming.
- Live TV is not interrupted and always on screen.
- Support of closed captioning and audio languages, including English and Spanish.

table of contents

P1					
ACCESSING ROVI DTA GUIDE					
Exploring Your Remote		2			
P3					
ON NOW/ON NEXT BANNER					
Using the On Now/On Next Banner		4			
Browsing the Channel Lineup		4			
P5					
TV LISTINGS GRID					
Accessing the TV Listing Grid		6			
Browsing the Channel Lineup		6			
Tuning to Channels from the Grid		6			
P7					
PROGRAM INFO SCREEN					
Accessing the Program Info Screen		7			
P8					
PARENTAL CONTROLS					
Setting Up Your PIN			8		
How to Lock Channels			9		
Locking Channels from Settings			9		
Locking Channels from Program Info			9		
Locking by Ratings			10		
Hiding Titles			11		
P12					
GENERAL SET-UP					
How to Change the Language			12		
Audio Language Options			12		
Changing the Audio Language			12		
HDMI Inputs			13		
HDMI Setup			13		
HDMI Setup Options			13		
Closed Captioning			14		

accessing rovi dta guide

There are three main display screens that present programming information, each leading to the other through an intuitive browsing experience.

Get brief information about one program, move onto the bigger picture with a full TV Listings Grid or get detailed information for a selection. It's your choice!



ON NOW/ON NEXT BANNER

The On Now/On Next banner allows you to quickly toggle between what's On Now and what's On Next for each channel. Brief programming information is given for each selection.

To access, simply change the channel you are viewing or press the **INFO** button while watching live TV.

TV LISTINGS GRID

This is the heart of the Rovi DTA Guide, with up to 24 hours of programming data for the channel lineup associated with your REV TV service. The screen shows seven channels at any given time with 90 minutes of programming for each.

To access, press **GUIDE** while watching TV or press **INFO** from the On Now/On Next Banner.



PROGRAM INFO SCREEN

Shows detailed program information such as synopsis, rating, channel, time, series info, production year and duration.

 
To access the program info, press **INFO** from the TV Listings Grid.



exploring your remote

The Rovi DTA Guide lets you find programs with just a few taps of the remote control.

Use these quick tips to enjoy full access to your guide.

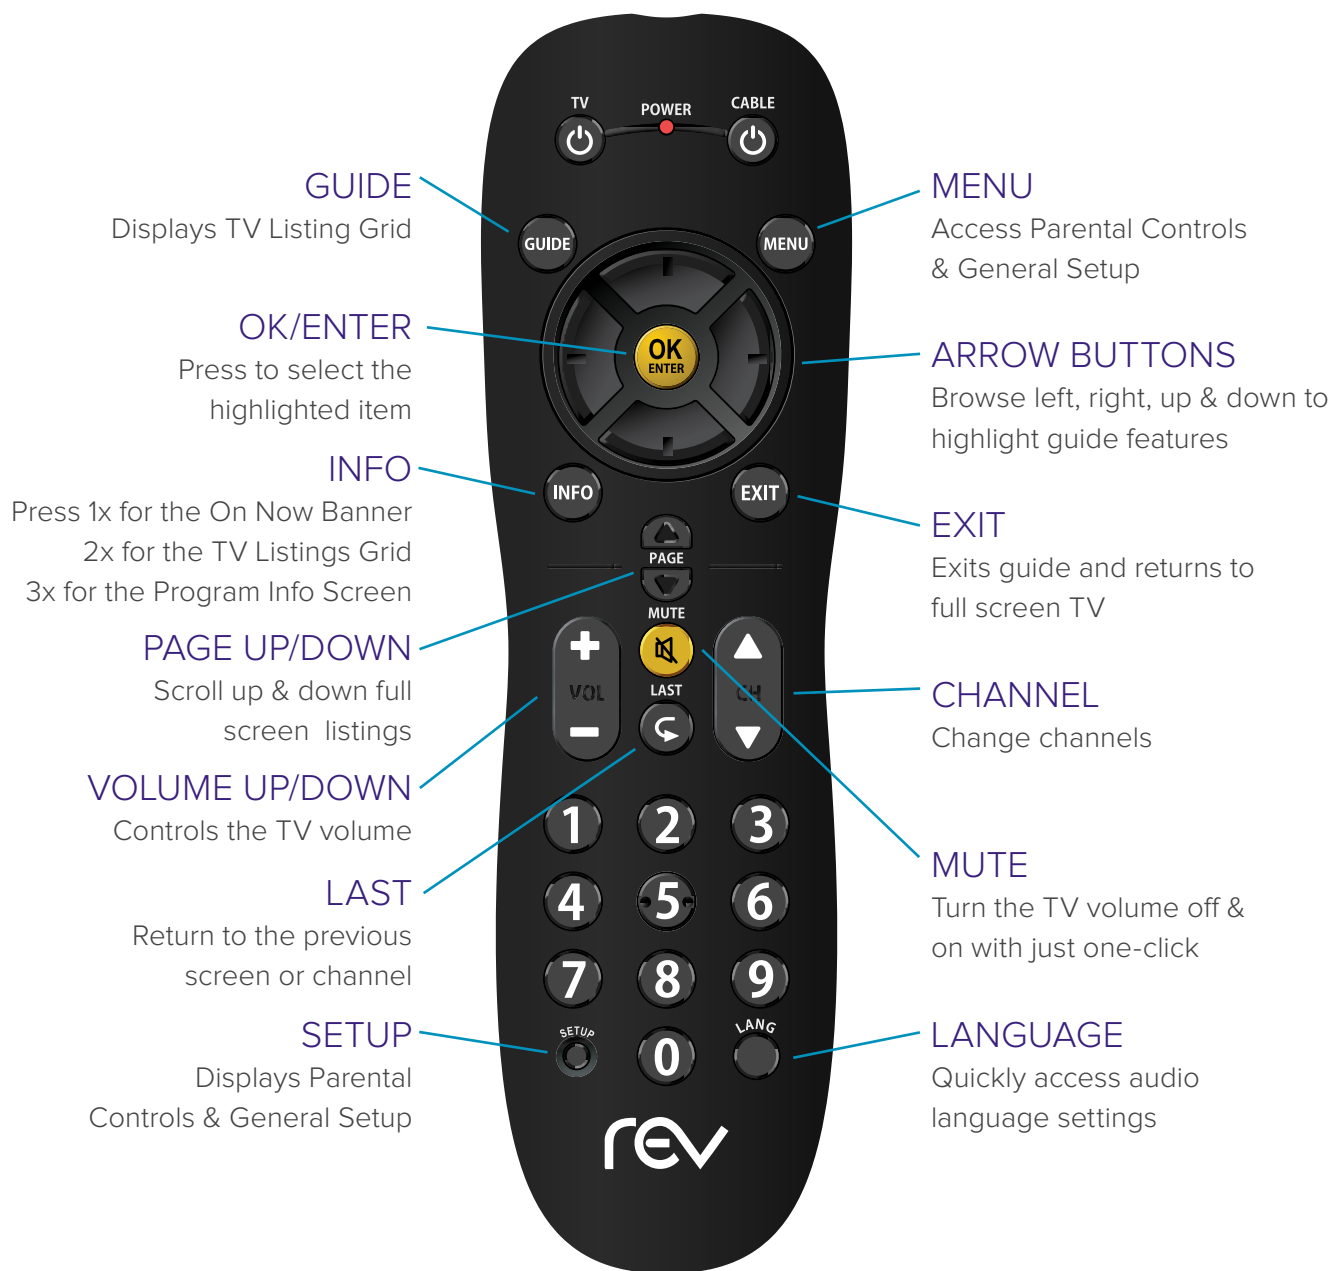


The LED will blink 5 times with each button press when batteries need to be replaced.



on now on next banner

The On Now/On Next Banner appears automatically when you change channels and gives you instant access to what's currently playing on a particular channel.

 From here, discover the next program coming up, find what's airing on other channels, or dive into an expanded programming schedule by moving onto the TV Listings Grid.

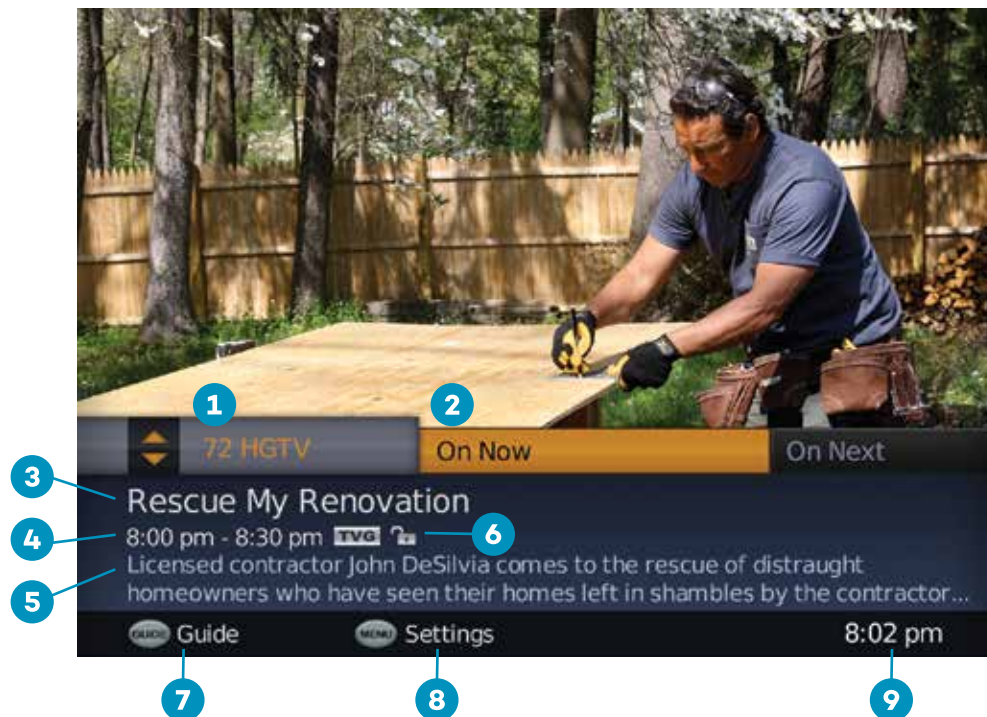

CHANNEL NUMBER & CALL LETTERS

- 1 Orange indicates the channel currently being watched. White indicates a channel you are browsing.

ON NOW/ON NEXT BANNER

- 2 Arrow LEFT & RIGHT to switch between On Now & On Next. An orange highlight indicates your selection.

TITLE OF PROGRAMMING

- 3 Full title of selection

TIME BLOCK

- 4 Start/End of program

PROGRAM INFORMATION

- 5 Program description, category, runtime and production date

LOCK & PROGRAM RATING

- 6 Indicates whether the program is under parental control and displays the rating of the program

GUIDE

- 7 Pulls up the TV Listings Grid

SETTINGS

- 8 Quickly access the Settings menu

CLOCK

- 9 Indicates the current time

USING THE ON NOW/ON NEXT BANNER

Use these quick steps to access and navigate the information on the On Now/On Next banner



ACCESSING THE ON NOW ON NEXT BANNER

- Press **CHANNEL** +/- buttons while watching TV or
- Press **INFO** while watching TV

SEE WHAT'S ON NEXT

Press the **RIGHT** arrow button on your remote to see What's On Next. On Next will become highlighted in orange.

Press the **LEFT** arrow button on your remote to return to What's On Now Banner

BROWSING THE CHANNEL LINEUP

1. While the On Now/On Next Banner is displayed, browse programming on other channels by pressing **UP** and **DOWN** buttons. The On Now/On Next Banner will refresh with information for that channel.
2. Press the **LEFT** and **RIGHT** buttons to toggle between What's On Now/On Next for that channel.
3. To tune to that channel, press **OK**.



Call numbers in orange indicate the banner is displaying information for the channel being watched. White call numbers indicate the banner is displaying information for a channel being browsed.



tv guide listings

This user-friendly interface provides access to seven channels of listings data at a time, with a 90-minute view of each.

The TV listings grid makes it easy to get details on upcoming programs and offers instant program info, color-coding for program type, and the ability to tune by pressing a single button. Plus, browse up to 24 hours of the schedule while continuing to watch your current program.

PROGRAM TYPES & COLORS

Rovi DTA Guide provides a color-coding system to distinguish programming types within the grid.

 
ORANGE Active Selection

BLUE General Program

GREEN Sports

MAGENTA Kids

PURPLE Movies

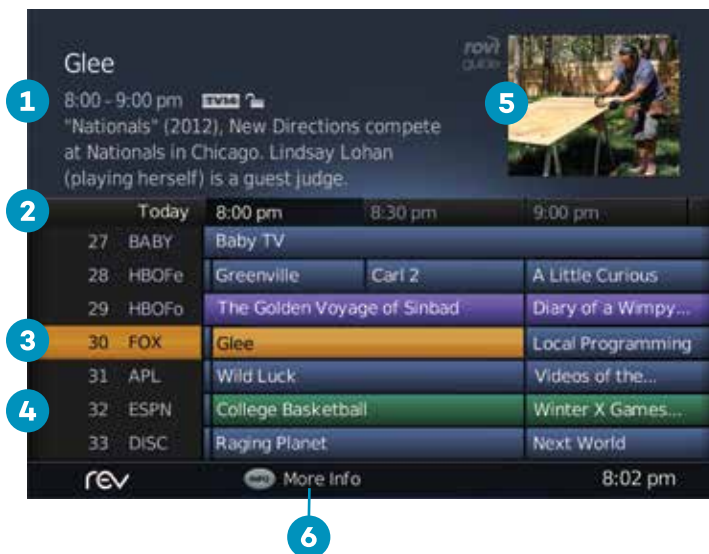

TV LISTINGS GRID DISPLAY

- QUICK INFO**
Synopsis, cast and other quick info on current selection.
- DAY & PROGRAM TIME**
Listed on the top of the grid in chronological order.
- SELECTION**
Highlighted program is always in the center of the row.
- CHANNEL NUMBER & CALL LETTERS**
Listed on the left side in numerical order.
- SCALED VIDEO VIEWING**
Uninterrupted viewing of the currently tuned channel.
- MORE INFO**
Press INFO for Program Information Screen.

COMMONLY USED ICONS



Indicates the item is locked with parental controls and requires a PIN to access



Indicates the item is unlocked and is available to view



Used in the settings menu. Indicates the item is the selected preference.

ACCESSING THE TV LISTINGS GRID

- Press **GUIDE**
- Press **INFO** from the On Now/On Next Banner
- Press **LAST** from the Program Information Screen

BROWSING THE CHANNEL LINEUP

1. Access the TV Listings Grid.
2. Use the navigation buttons to move **UP**, **DOWN**, **LEFT** & **RIGHT** through the grid one program or channel at a time. Use the OK button to confirm a selection.
3. Use the **PAGE +/-** buttons to move **UP** and **DOWN** through the guide (seven channels at a time).
4. Highlight a program and quick info will be displayed in the upper left hand corner of the screen.
5. Want more info on that program?
Just press the INFO button to display the Program Information Screen.



TUNING TO CHANNELS FROM THE GRID

 
Highlight a program currently airing and simply press **OK** on the remote control to tune to that channel.



program info screen

The Program Information Screen gives you in-depth information on TV shows, movies, sports events and more.

Data may include synopsis, rating, broadcast channel, time slot, series information, and year of production. Your current program will continue to display in the scaled video view in the upper right hand corner.

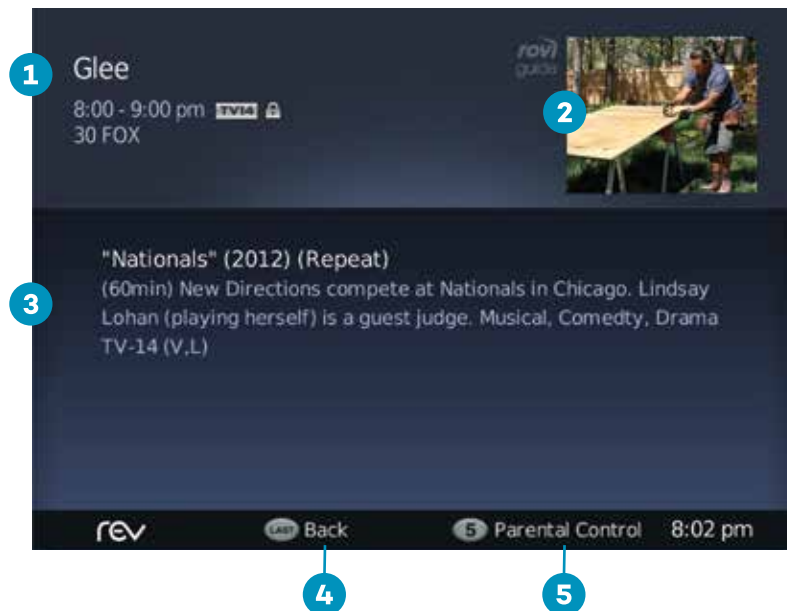

PROGRAM INFO

- 1 Program description includes title, parental lock status, start/end time, channel and call numbers

BACK

- 4 Brings you back to the TV Listings Grid

SCALED VIDEO VIEWING

- 2 Uninterrupted viewing of the currently tuned channel

PARENTAL CONTROLS

- 5 Press 5 for the one-step parental lock

SYNOPSIS

- 3 Summary of Episode/Program



Press **INFO** from the TV Listings Grid to access the Program Info Screen.



parental controls

Easy-to-use parental controls allow you to set viewing restrictions by channel and rating.

The settings menu enables you to set up a PIN (Personal Identification Number) that can be used to apply these Parental Controls. Locked programs cannot be viewed until the PIN is entered.

SETTING UP YOUR PIN

1. Press **MENU** on the Remote Control.
2. Parental Control is the first option and highlighted. Press **OK** for initial PIN setup.
3. Enter a 4-digit PIN of your choice.
4. The guide will prompt you to confirm your PIN. Once confirmed, the status column should now read Set.



Press **LAST** at any time to cancel the PIN setup.

HOW TO LOCK CHANNELS

There are two ways to lock channels:

- From the Parental Control option in Settings
- From the Program Information Screen

 

LOCKING CHANNELS FROM SETTINGS

1. Press **MENU** on the Remote Control. Parental Control is the first option and will be highlighted.
2. Press the **RIGHT** arrow to highlight the second column. The user will be prompted to Setup or enter their PIN to continue.
3. Press the **DOWN** arrow to highlight Channels.
4. Press the **RIGHT** arrow to access the third column. Use the **UP** and **DOWN** buttons to navigate the list.
5. Highlight the desired channel and press **OK** to lock. The lock icon will display.
6. If the lock is already set, press **OK** to remove the lock.



LOCKING CHANNELS FROM PROGRAM INFORMATION

1. Press **5** to access Parental Control and enter your PIN to continue.
2. Press **OK** to set a Channel Lock. The icon will change to locked.
3. Press **LAST** to return to Program Information.

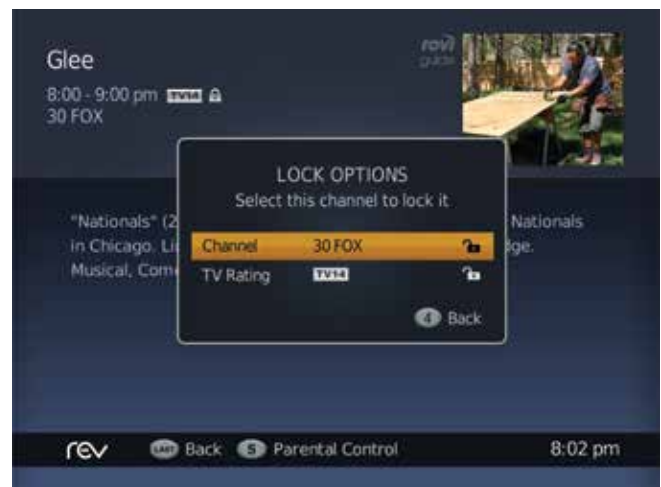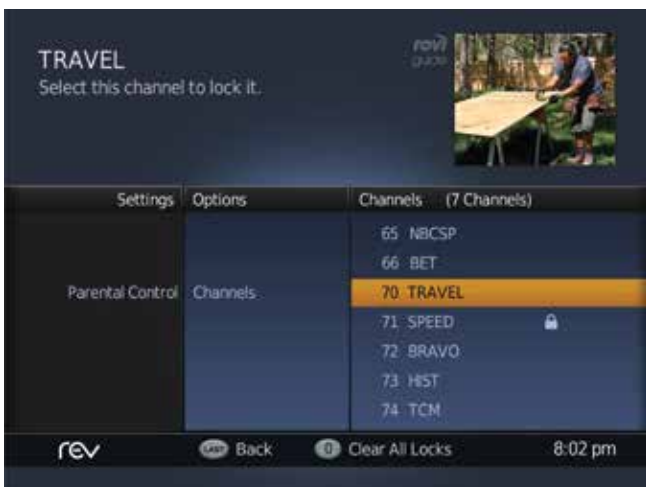

LOCKING BY RATINGS

You can choose to lock ratings by both TV Ratings and Movie Ratings.
The Rovi DTA Guide provides flexibility by providing parental controls for each.

HOW TO LOCK BY RATINGS

1. Press **MENU** on the Remote Control. Parental Control is the first option and highlighted.
2. Press **RIGHT** to highlight the second column. The user will be prompted to Setup or enter their PIN to continue.
3. Press **DOWN** to highlight Movie Ratings or TV Ratings. The third column will now change to Movie Ratings or TV Ratings, respectively.
4. Press **RIGHT** to access the third column. Use the **UP** and **DOWN** buttons to navigate the list.
5. Highlight the desired rating and press **OK** to initiate the lock. The icon will change to locked.
6. If the lock is already set, you can press OK to unlock. The icon will change to unlocked



When a TV or Movie rating is selected, the guide will automatically lock that rating and the more restrictive ratings.
For example, if you lock R, all higher ratings are also locked (NC-17, Adult, etc.)

HIDING TITLES

You can also choose to hide titles of programs that have Adult and TV-MA ratings. When titles are hidden either Adult Programming or TV-MA Programming will appear in the TV Listings grid and the program information is left blank.

HOW TO HIDE TITLES

1. Press **MENU** on the Remote Control. Parental Control is the first option and highlighted.
2. Press **RIGHT** to highlight the second column. The user will be prompted to Setup or enter their PIN to continue.
3. Press **DOWN** 4x to highlight Hide Titles
4. Press **OK** to access options.
5. Highlight the desired title list you wish to hide - Adult or Adult and TV-MA.
6. Press **OK** to toggle hiding titles.



Hiding titles does not restrict access to the programming. Use Lock By Rating to prevent access to Adult or TV-MA content.



general setup

Your guide can be personalized to display menus and overlays in English or Spanish.

HOW TO CHANGE THE LANGUAGE

1. Press **MENU** on the Remote Control.
2. Highlight General Setup.
3. Press **RIGHT** to move to the second column. Language is highlighted. The third column displays options for English and Spanish.
4. Press **RIGHT** to access the third column.
5. The current language selection is shown with a check mark.
6. To change the language, scroll **UP** and **DOWN** to navigate the list. Press **OK** to select language. A check mark will appear next to that option.



AUDIO LANGUAGE OPTIONS

Some networks offer alternate language in their audio sound tracks. If available, use the audio language options to personalize the desired default language.

CHANGING THE AUDIO LANGUAGE

1. Press **LANG** on the Remote Control.
The currently selected language is shown with a check mark.
2. Press **UP** and **DOWN** to navigate the list.
3. To change the language, select an option and press **OK**. A check mark will appear next to that option.



HDMI INPUTS

If you have an HD DTA, there are two additional settings available, HDMI Setup and Closed Captioning.

HDMI SETUP

With an HD DTA, you can change the HDMI input based on your preference. The default setting is Auto.

1. To change the setting, press **MENU** on the Remote Control and highlight HDMI Setup.
2. Press **RIGHT** to highlight a new display setting. A checkmark will designate your selection.
3. Press **EXIT** to return to watching TV.

HDMI SETUP OPTIONS

- Auto
{automatically displays at best resolution available on the TV}
- 1080i wide
- 720p normal
- 720p wide
- 480p 16:9
- 480p 4:3
- 480i



The available options depend on the capabilities of your television.

CLOSED CAPTIONING

 
HD DTAs also provide extensive Closed Captioning (CC) options, including selecting a font color and style, background color and transparency.

CLOSED CAPTIONING SETUP

1. The default setting for Closed Captioning is **OFF**. To turn it on, press **MENU** on the Remote Control.
2. Highlight Closed Captioning. Then, press **RIGHT** 2x to select one of the following options:
 - **AUTO** Automatically display Closed Captioning when available in the default format, white text on black background.
 - **CUSTOM** Customize the way Closed Captioning appears on your TV.
When Custom is selected, additional options in the middle column are available. Press **LEFT** to select options including:
 - Font style, size, color and opacity
 - Font edge style and color
 - Background color and opacity
 - Window color and opacity

Select the combination of settings that are right for you.

You can select Auto to return to the default setting or turn off the feature at any time.

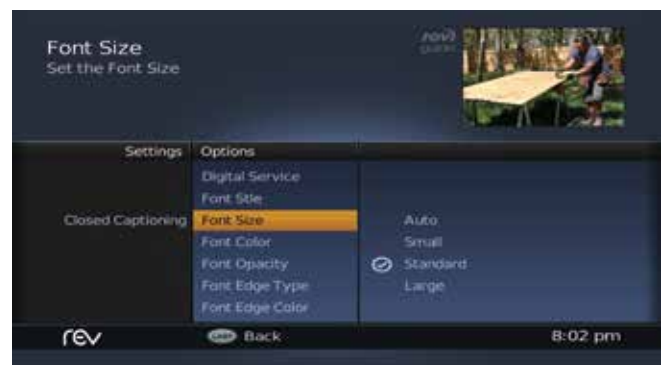

LEGAL NOTICE

Copyright © 2014 Rovi Corporation. All rights reserved. Rovi and the Rovi logo are trademarks of Rovi Corporation and/or its subsidiaries.

Rovi is registered in the United States and other countries.

This document contains confidential information of Rovi Corporation. This document, and the software described in it, are furnished under license only and may only be used or copied in accordance with the terms of such license and applicable copyright laws. The information in this document is provided for informational use only and is subject to change without notice. Rovi assumes no responsibility or liability for any errors or inaccuracies that may appear in this document or for any omissions. Except as permitted by such license and applicable copyright laws, no part of this publication may be reproduced, stored in a retrieval system, transmitted, adapted, translated in any form or by any means without prior written authorization of Rovi.

This product is protected by one or more of Rovi or its subsidiaries' patents which may include the following US patents: 6,418,556; 7,100,185; 6,396,546; 5,940,073; and 6,239,794.

All other product names mentioned in this document are trademarks of their respective owners.

Rovi Corporation
2830 De La Cruz Boulevard
Santa Clara, CA 95050



rev

letsrev.com | 866-881-4REV