



wireless access point (ap)

MODEL VEN501

- 1 Connect Power to the AP. Connect Ethernet from the AP to the RG.
- 2 Check the back of the AP.
There will be a toggle switch (CL-AP) Make sure it is on AP.
- 3 Connect Wireless STB to power & wait until a prompt appears asking you to connect.
- 4 Press OK on the Wireless STB.
- 5 Go to the AP, press and hold the WPS button for 2 seconds the release to activate the WPS process.
- 6 The WPS Button will blink Orange.
- 7 A gear icon will appear indicating the connection sequence is in progress.
- 8 When three horizontal dots appear, the connection has been successful.
- 9 On the front pane of the Wireless STB two or more LEDs on the Signal Strength indicator will light green.

pace 5268ac

(RG)

- 1 Connect Wireless STB to power & wait until a prompt appears asking you to connect.
- 2 Press OK on the wireless set-top box.
- 3 Go to the RG, press and release the WPS button 3 times to activate the WPS process.
- 4 The light next to WPS will blink GREEN.
- 5 A gear icon will appear indicating the connection sequence is in progress.
- 6 When three horizontal dots appear, the connection has been successful.
- 7 On the front pane of the wireless set-top box, two or more LEDs on the signal strength indicator will light-up GREEN.

CONTACT US FOR ASSISTANCE WITH SET-UP & TROUBLESHOOTING

TOLL FREE
(866) 881-4REV